

IGNITION SWITCHES

2 POSITION IGNITION SWITCHES



31-602 2 POSITION
OFF-ON
2 SCREW TERMINALS



33-604 2 POSITION
OFF-ON
2 SCREW TERMINALS



33-103 2 POSITION
OFF-ON

3 POSITION IGNITION SWITCHES



31-609 3 POSITION
OFF-ON/ACC-START
SPRING RETURNS
TO ON
4 STUD TERMINALS



31-297 3 POSITION
OFF-ON/ACC-START
SPRING RETURNS TO
ON
7 BLADE TERMINALS



31-253 3 POSITION
OFF-ON/ACC-START
SPRING RETURNS TO
ON
4 STUD TERMINALS



33-104 3 POSITON
OFF-ON/ACC-START
SPRING RETUNS TO ON
"PUSH TO CHOKE"
FEATURE
MAGNETO GROUNDED
6 SCREW TERMINALS
MARINE




33-105 3 POSITON
OFF-ON/ACC-START
SPRING RETUNS TO ON
"PUSH TO CHOKE"
FEATURE
MAGNETO GROUNDED
6 SCREW TERMINALS
MARINE

4 POSITION IGNITION SWITCHES



31-114 4 POSITION
ACC-OFF-ON/ACC-START
SPRING RETURNS TO ON
11 BLADE TERMINALS
HOUSING TIED TO GROUND TERMINAL

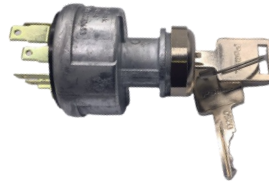

31-231 4 POSITION
ACC-OFF-ON/ACC-START
SPRING RETURNS TO ON
7 BLADE TERMINALS
HOUSING TIED TO GROUND TERMINAL



31-610 4 POSITION
ACC-OFF-ON/ACC-START
SPRING RETURNS TO ON
5 STUD TERMINALS



31-103 4 POSITION
ACC-OFF-ON/ACC-START
SPRING RETURNS TO ON
5 STUD TERMINALS



31-105 4 POSITION
ACC-OFF-ON/ACC-START
SPRING RETURNS TO ON
5 STUD TERMINALS



31-112 4 POSITION
ACC-OFF-ON/ACC-START
SPRING RETURNS TO ON
5 SCREW TERMINALS
HOUSING TIED TO GROUND TERMINAL



31-242 4 POSITION
ACC-OFF-ON/ACC-START
SPRING RETURNS TO ON
5 SCREW TERMINALS



31-499 4 POSITION
ACC-OFF-ON/ACC-START
4 STUD TERMINALS
HI POWER IGNITION SWITCH



31-527 4 POSITION
ACC-OFF-ON/ACC-START
4 STUD TERMINALS
DESIGNED W/GLOW PLUG "WARM" POSITION

REPLACEMENT KEYS



31-166-001 UNIVERSAL



31-332 UNIVERSAL



31-600-103 FOR 31-104, 32-106,
& 31-112
PK556