


# Battery Crimp Terminals

## Straight Clamp




Positive Part No.	Negative Part No.	Wire Gauge
FBT4P	FBT4N	4 GA
FBT1&2P	FBT1&2N	1&2 GA
FBT1/0P	FBT1/0N	1/0 GA
FBT2/0P	FBT2/0N	2/0 GA
FBT3/0P	FBT3/0N	3/0 GA
FBT4/0P	FBT4/0N	4/0 GA
Universal Terminals		
FBT4U		4 GA
FBT1&2U		1&2 GA

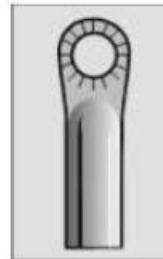


## Stud/Side Terminal-Locking

Part No.	Wire	Stud
4904	4 GA	3/8"
4901	1 & 2 GA	3/8"
4901-H	1 & 2 GA	1/2"
4910	1/0 GA	3/8"
4920	2/0 GA	3/8"

## Flag Terminals

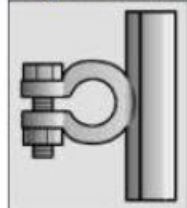

Positive Part No.	Negative Part No.	Wire Gauge
FBA1&2P	FBA1&2N	1&2 GA
FBA1/0P	FBA1/0N	1/0 GA
FBA2/0P	FBA2/0N	2/0 GA
FBA3/0P	FBA3/0N	3/0 GA

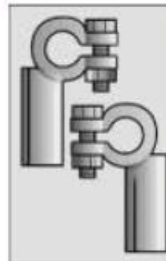

## Elbow Terminals

Right Elbow		Left Elbow		Wire Gauge
Positive Part No.	Negative Part No.	Positive Part No.	Negative Part No.	
FRE1P	FRE1N	FLE1P	FLE1N	1&2 GA
FRE1/0P	FRE1/0N	FLE1/0P	FLE1/0N	1/0 GA
FRE2/0P	FRE2/0N	FLE2/0P	FLE2/0N	2/0 GA
FRE3/0P	FRE3/0N	FLE3/0P	FLE3/0N	3/0 GA
FRE4/0P	FRE4/0N	FLE4/0P	FLE4/0N	4/0 GA


# Universal Terminals

## Heavy Duty Top Post



805CP-6-2/0 AWG

## Side Terminal Adapters

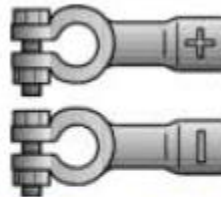

807P-Positive 807N-Negative


## Wingnuts



862P-Positive 862N-Negative

## Side Terminals

806CP Side Mount

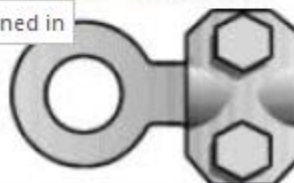

Jim Mooney (jim@ffastener.local) is signed in

## Battery Hardware



CPM



7800



7802



BNBL



SMU

Part No.	Description
CPMP CPMN	Side Terminal Charging Post
7800	OEM Side Term. Bolt
7802	3/8" Closed Cap Nut for Stud Term
BNBL	Batt. Nut and Bolt
SMU	Side Mt. Univers. Battery Bolt
SMU-LONG	Side Mt. Univers. Bolt-long
SMU-GM	Side Mt. Univers. for GM trucks